




Billet Airbox Lid Can-Am

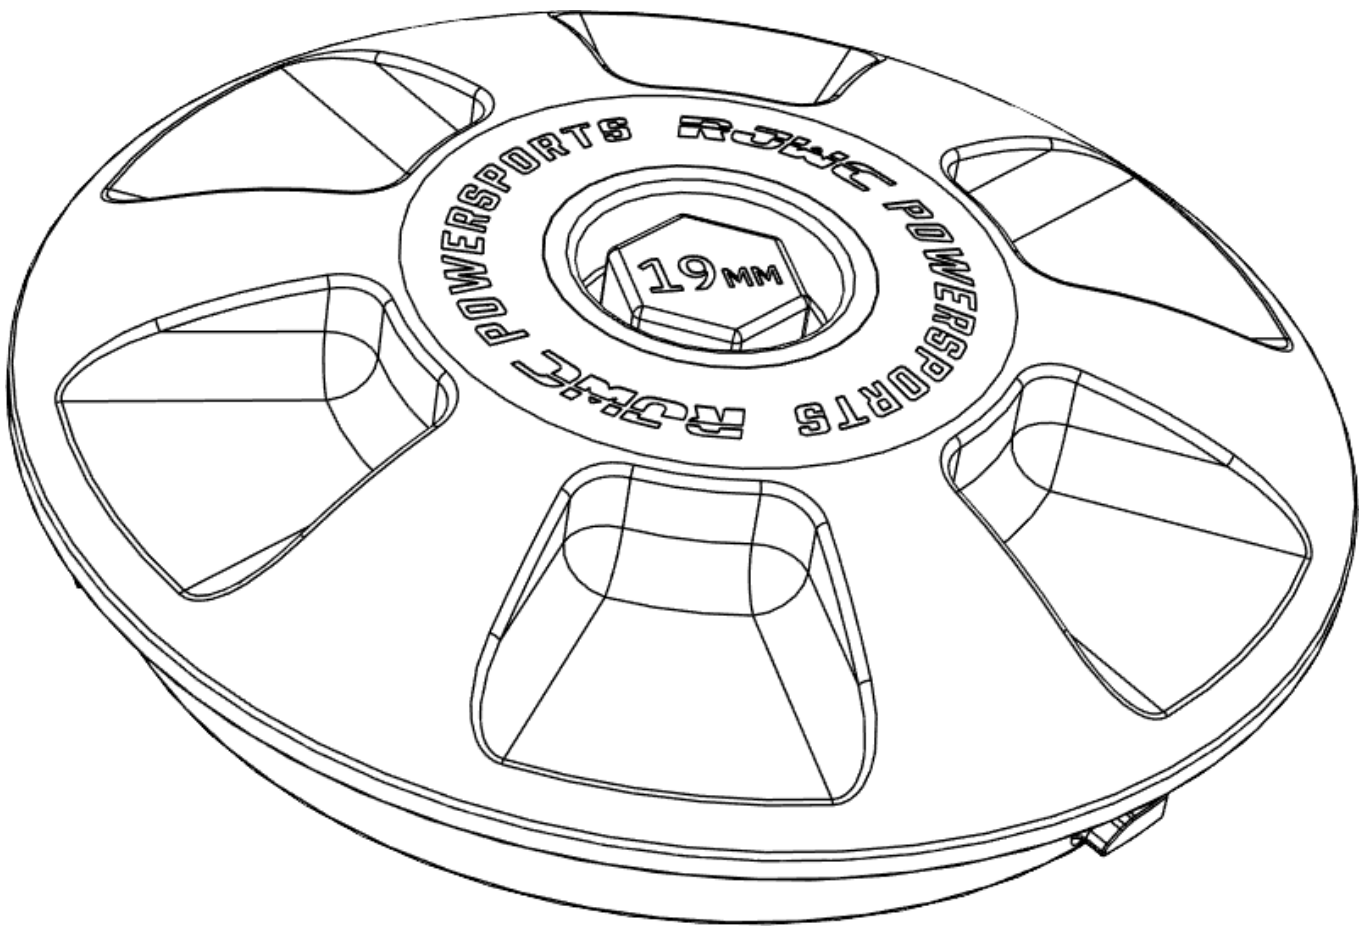

Installation Manual



Important Safety Information - Read Before Installation

WARNING: Before starting the installation of any ATV, UTV, or SXS aftermarket parts, it is important to prioritize safety. Make sure you are using suitable protective gear, this includes but is not limited to safety goggles, gloves and protective clothing.

Ensure your vehicle is on flat, stable ground. Installing parts on uneven or unstable surfaces can potentially lead to injury or damage to the vehicle. The vehicle should be turned off and cooled down before proceeding with the installation. Attempting to install parts on a running or hot vehicle can result in burns or other serious injuries.

After completing installation, it is important to inspect and check the tightness of any and all nuts, screws, and bolts. Failure to properly secure these fasteners can lead to component failure or detachment during riding, posing significant safety risks to both the rider and bystanders. The vehicle should be warmed up and subsequently cooled down to account for any thermal expansion or contraction effects that may affect the tightness of the fasteners.

It is crucial to inspect and tighten screws and bolts as necessary after initial rides, as vibrations and stresses during operation can cause fasteners to loosen over time.

Prior to starting the installation process, it is important to thoroughly read all provided instructions to familiarize yourself with the installation procedures and any specific requirements or precautions. Failure to follow the instructions could result in improper installation or component failure.

Please check your local laws and regulations governing the use of aftermarket parts on your vehicle. Failure to comply with these regulations can result in legal repercussions, fines, or other penalties. Therefore, it is important to research and understand the applicable laws and regulations before installing aftermarket parts on your vehicle. Always ensure that any modifications made to your vehicle comply with local regulations.

Please check and read the full Warranty Information that can be found at:
www.RJWC.se/warranty-information/

Need help? Got a question?

Get in touch at help@RJWCPowersports.com or your closest RJWC Powersports Dealer.

WARNING


Choking Hazard
May Contain Small Parts.
Keep away from children and pets.

Billet Airbox Lid Can-Am

Parts Included

- 1x RJWC Billet Airbox Lid
- 1x Airbox Seal

Billet Airbox Lid Installation

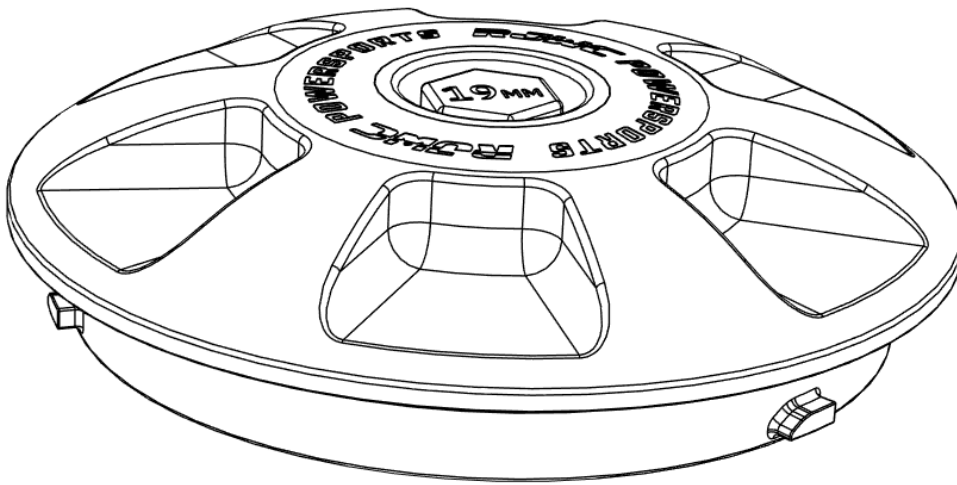

- Remove the seat, and the plastic panel that is located below the handlebar
- Remove the stock plastic lid by using your hands, check there is no dirt, dust or water on the inside of the airbox
- Check your OEM airbox for leaks and gaps in the plastic molding, as well as uneven surfaces where the gasket is placed. If you find uneven surfaces, use sandpaper or a small file to grind it down
- Check the silicone rubber gasket sits correctly in the Billet Airbox Lid
- Install the new lid by lining up the 3 tabs into place, and give it a hard push to make the tabs fall into place
- Turn the Billet Airbox Lid into place by using a 19mm socket and a ratchet.

Important!

- Do not use too much force when turning the Billet Airbox Lid in place, the airbox is plastic and the lid is aluminum - using too much force can damage the airbox